

# Niobrara Research & Development Corporation

P.O. Box 3418; Joplin, MO 64803  
 Telephone: (417) 624-8918 Facsimile: (417) 624-8920 www.niobrara.com

**MSTD-005** Momentum<sup>®</sup> Serial Tophat Effective: 23 March, 2004

## Introduction

The Momentum<sup>®</sup> Serial Tophat (MST) provides a serial communications adapter for Modicon Momentum I/O bases. The MSTD-005 allows I/O to be easily added to existing multidrop or point-to-point Modbus networks.

The MSTD-005 communicates SY/MAX, PLOGIC, PNIM, and RNIM protocols at 9600 baud with 8 data bits and even or no parity.

The MSTD-005 is powered by the Momentum base. LED indicators show the state of POWER, Serial TX and RX. The green POWER LED should be on if the MSTD-005 is properly powered by the base. The POWER light will flash slowly if the unit is set to slave address 0. The yellow TX light is on while the MSTD-005 is transmitting data while the RX light indicates data arriving at the MSTD-005.

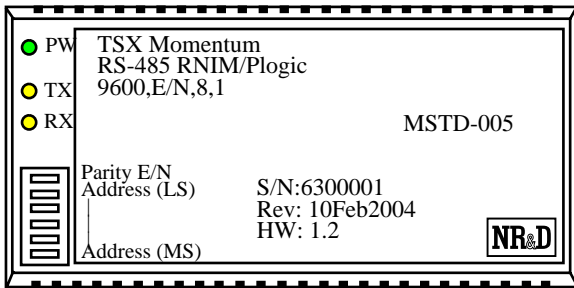


Figure 1 MSTD-005 Layout

## MSTD-005 Configuration

The MSTD-005 is configured through a 6 position DIP switch on its front. Switches 1, 2, 3, 4, and 5 control Slave Address while switch 6 sets the parity and data bits.

**NOTE:** The MSTD-005 only reads the DIP switches on power-up. Power must be cycled after changing the Parity or Slave Address.

1 = ON (left), 0 = OFF (right)

Figure 2 displays the DIP switch settings for a MSTD-005 set for Slave Address 13 and EVEN parity. From 1 to 6, the settings are 011011.

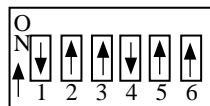


Figure 2 Example for Slave Address = 13, EVEN parity

Table 1 Slave Address Switch Settings

| Slave | SW1 | SW2 | SW3 | SW4 | SW5 |
|-------|-----|-----|-----|-----|-----|
| N/A   | 0   | 0   | 0   | 0   | 0   |
| 1     | 0   | 0   | 0   | 0   | 1   |
| 2     | 0   | 0   | 0   | 1   | 0   |
| 3     | 0   | 0   | 0   | 1   | 1   |
| 4     | 0   | 0   | 1   | 0   | 0   |
| 5     | 0   | 0   | 1   | 0   | 1   |
| 6     | 0   | 0   | 1   | 1   | 0   |
| 7     | 0   | 0   | 1   | 1   | 1   |
| 8     | 0   | 1   | 0   | 0   | 0   |
| 9     | 0   | 1   | 0   | 0   | 1   |
| 10    | 0   | 1   | 0   | 1   | 0   |
| 11    | 0   | 1   | 0   | 1   | 1   |
| 12    | 0   | 1   | 1   | 0   | 0   |
| 13    | 0   | 1   | 1   | 0   | 1   |
| 14    | 0   | 1   | 1   | 1   | 0   |
| 15    | 0   | 1   | 1   | 1   | 1   |
| 16    | 1   | 0   | 0   | 0   | 0   |
| 17    | 1   | 0   | 0   | 0   | 1   |
| 18    | 1   | 0   | 0   | 1   | 0   |
| 19    | 1   | 0   | 0   | 1   | 1   |
| 20    | 1   | 0   | 1   | 0   | 0   |
| 21    | 1   | 0   | 1   | 0   | 1   |
| 22    | 1   | 0   | 1   | 1   | 0   |
| 23    | 1   | 0   | 1   | 1   | 1   |
| 24    | 1   | 1   | 0   | 0   | 0   |
| 25    | 1   | 1   | 0   | 0   | 1   |
| 26    | 1   | 1   | 0   | 1   | 0   |
| 27    | 1   | 1   | 0   | 1   | 1   |
| 28    | 1   | 1   | 1   | 0   | 0   |
| 29    | 1   | 1   | 1   | 0   | 1   |
| 30    | 1   | 1   | 1   | 1   | 0   |
| 31    | 1   | 1   | 1   | 1   | 1   |

1 = ON (up), 0 = OFF (down)

**NOTE:** Power must be cycled after changing the Parity or Slave Address for the change to take effect.

## Network Connection

The MSTD-005 has a 5-position screw terminal 4-wire connection. The pinout is shown in Figure 3.

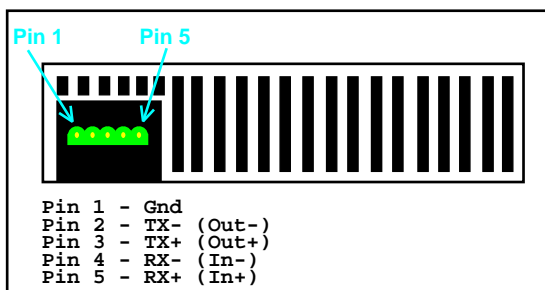


Figure 3 5-Pin RS-485 Port

## Register List

The Modbus models mimic the standard Modicon Ethernet Communication Adapter with some additional register support. The Output registers are zeroed on power-up and when the watchdog expires between write messages. The Watchdog register value is written to EEPROM for permanent setting. Setting the slave address to 0 returns the watchdog to factory default.

Table 2 MSTD-005 Register List

| Register                                   | Description   |
|--|---|
| 4x00001 - 4x00032                          | Read - Base Inputs<br>Write - Base Outputs  |
| 4x00101 - 4x00132                          | Read - Base Outputs<br>Write - Base Outputs   |
| 4x00200 and 4x61441                        | Base Output Watchdog (0.01 second)<br>Default = 3000 (30 seconds)<br>The MSTD-002 must receive a write within the timeout or the outputs will zero. |
| 4x00201 and 4x63489                        | Size of Status Block (const = 12)   |
| 4x00202 and 4x63490                        | Number of Input Words   |
| 4x00203 and 4x63491                        | Number of Output Words  |
| 4x00204 and 4x63492                        | Module Base ID code   |
| 4x00205 and 4x63493                        | Module Revision Number  |
| 4x00206 - 4x00209 and<br>4x63494 - 4x63497 | N/A   |
| 4x00210 and 4x63498                        | Module Health (8000 is good Health)   |
| 4x00211 and 4x63499                        | Last I/O module error #   |
| 4x00212 and 4x63500                        | Count of I/O module errors  |
| 8009                                       | RNIM Network ID (limited to 0-47)   |
| 8174                                       | Write xC5C5 to save parameters to EEPROM  |